

Welcome to your

nookcolor™
by Barnes & Noble



Quick Start Guide

Charge your NOOKcolor™


1

You must fully charge your NOOKcolor before using it the first time.

Plug your NOOKcolor into a wall outlet using the Power Adapter and USB Cable included with your NOOKcolor.

You can use your NOOKcolor while it charges.

The charging indicator light on the USB cable will show orange when charging and will turn green when the battery is full. The indicator will only light up when connected to the NOOKcolor power adapter and cable. It takes approximately 3 hours to fully charge your NOOKcolor.

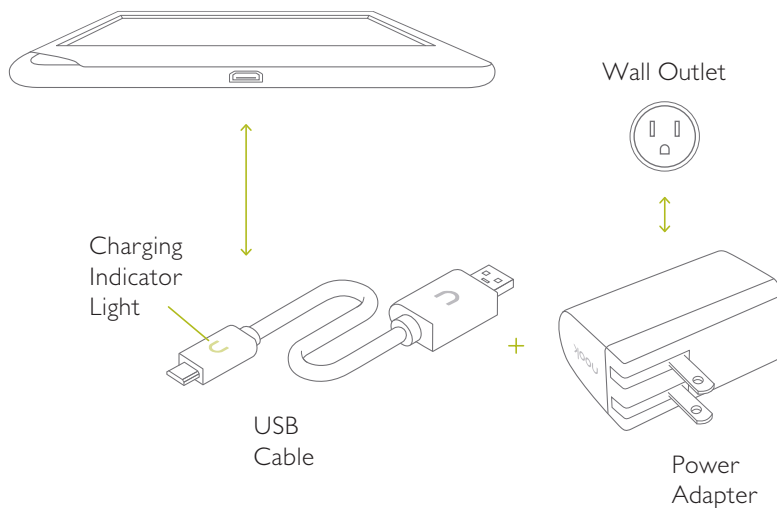


NOTE: To charge your NOOKcolor, you must plug it into a wall outlet. Your NOOKcolor will not charge when connected to a computer.

2

Get to know your NOOKcolor

Power Button

Press and hold the power button for about 2 seconds to turn your NOOKcolor on or off.

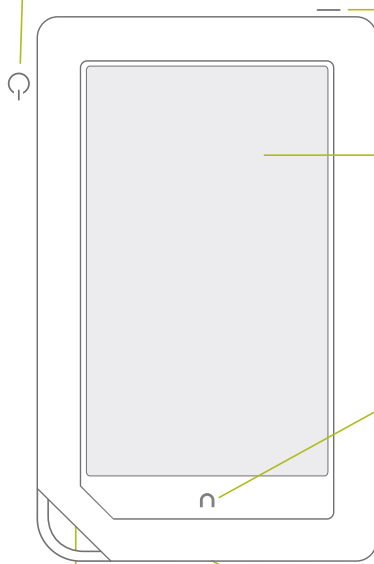


Headphone Jack (3.5mm)

Volume Buttons

VividView™ Color Touchscreen

Your NOOKcolor features a high-resolution, color touchscreen for easy navigation and page turns.

Home Button

This  NOOK™ symbol on the bottom face of the device is a button. Press it to wake up your device from sleep mode (turn the display on). When the device is on, pressing the Home Button will take you back to the Home Screen.

microSD™ Memory Card Slot

On the back of your NOOKcolor, lift the rubber flap with the NOOK logo for the microSD memory card slot, which allows you to increase the storage capacity of your NOOKcolor.

microUSB Port

Port for charging and connecting to a computer.

Unlock your NOOKcolor

Slide the NOOK icon to the right to unlock your NOOKcolor.



3

Set up: turning on your NOOKcolor for the first time

1. Watch a Quick Video

The first time you turn on your NOOKcolor, there is a brief video to help you with the set-up and registration process of your NOOKcolor.

2. Read and Accept the Terms of Service

When the video has finished, your NOOKcolor displays its Terms of Service. Read the terms. To accept them, tap *Accept*.

3. Select your Time Zone

Tap on your time zone (for example, Eastern Standard Time). Then tap *Next*.

4. Connect to a Wi-Fi® network

To register your NOOKcolor and to purchase and download books and periodicals, you need to be connected to a Wi-Fi network.

5. Register your NOOKcolor

You must register your NOOKcolor to your BN.com account. This gives you access to any books in your Barnes & Noble library and allows you to shop for new books, magazines, and newspapers on your NOOKcolor.

If you already have a BN.com account:

1. Tap the *Sign In* button.
2. Enter the email address and password for your account.
3. Tap *Submit*.

If you do not yet have a BN.com account:

1. Tap the *Create an Account* button.
2. Fill in the form with your name, email, password, and so on.
3. Tap *Submit*.

That's it. You've registered your NOOKcolor. You're ready to read books, magazines, and newspapers, and to shop in the NOOK store.

Home screen

4

Home Screen

You can get to the Home Screen at any time by pressing the  Home Button.



Reading Now

At the top of the Home Screen, you'll find a link to whatever book or periodical you've most recently been reading. You'll also find a pull-down menu listing other books, periodicals, and files you have recently opened.

Daily Shelf™

The Daily Shelf holds books, magazines, and newspapers that you have recently received (for example, purchased, downloaded, or borrowed). The Daily Shelf runs left to right with the newest item on the left. You can move back and forth through the Daily Shelf by swiping your finger across its contents.

Status Bar


The Status Bar includes the time and icons for battery status, Wi-Fi connectivity, and a shortcut to reading now.

Quick Nav Arrow

Tap the white Quick Nav Arrow to make the Quick Nav Bar appear or disappear.

Quick Nav Bar

Tap the icons in the Quick Nav Bar to open various features on your NOOKcolor, such as *library*, *shop*, *search*, *extras*, *web*, and *settings*.

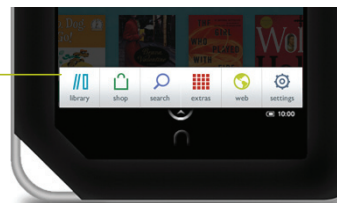

Touch gestures

5

Use the following gestures to navigate on your NOOKcolor:




Tap

Touch your fingertip quickly to the screen, as though you were tapping a key on a keyboard.

Press & Hold

Touch your finger to the screen and hold it there for about 2 seconds. In many situations, pressing and holding will pop open a menu.

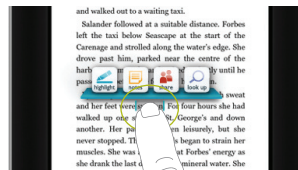

Drag

Press and hold on an object and slide it to another location on the screen.

Touch gestures cont.

5_{cont.}

Scroll

Slide your finger up or down the screen to scroll through a list displaying a scrollbar; it is a vertical swipe.



Swipe


Glide your finger across the screen, usually to the left or the right.

Pinch and Zoom

Place two fingers—typically your thumb and forefinger—about an inch apart on the screen. Slide them together to “pinch in.” In most situations, pinching in zooms out an image or shrinks it.

Slide your fingers apart to “pinch out.” In most situations, pinching out zooms in on an image.

The area between your fingers appears larger on the screen.

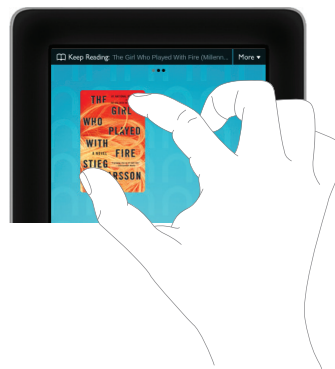

Start reading

6

Find a book

You'll find books, magazines, and newspapers on the Daily Shelf of the Home Screen. You'll also find them in your library. To navigate to the library, tap the white Quick Nav Arrow in the Status Bar to display the Quick Nav Bar. Then tap the *library* icon in the bar.



Open a book

To open a book, tap on its cover.

Turn pages

To turn the page of a book, tap on the right edge of the screen. To go back a page, tap on the left edge of the screen. Alternatively, you can swipe from right to left to turn to the next page, and swipe from left to right to turn back to the previous page.

Reading tools

To personalize your reading experience, such as adjusting the text size or font style in the book you're reading, tap the center of the page to display your Reading Tools. The Reading Tools let you:

- browse the table of contents and keep notes
- search for words or phrases
- share quotes and recommendations with friends on Facebook®, Twitter®, and email
- adjust text size, font style, line spacing, and other aspects of the page
- adjust the brightness of the screen

To change the font size, tap the text icon in the Reading Tools. When you're finished, tap the top of the page to make the Reading Tools disappear.

Discover new favorites

7

Shopping is fun and easy on your NOOKcolor.

Shop at the NOOK store


To visit the NOOK store:

1. Tap the Quick Nav Arrow in the Status Bar to display the Quick Nav Bar.
2. Tap the *shop* icon.

On the Store Front, swipe left and right to read about special offers.

Browse bestseller lists and categories

To see recommendations, bestseller lists, and books, magazines, and newspapers sorted by category, tap the *Browse* button in the lower corner of the NOOK store.

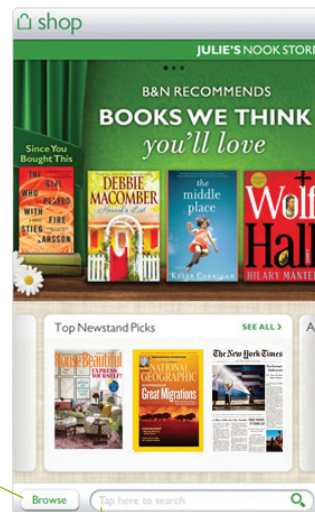

Search the store

Tap in the search field to display an on-screen keyboard so you can enter a title, author name, or topic for searching.

Make a purchase with the tap of your finger

Once your BN.com account is set up with a valid credit card, you can make purchases with the tap of your finger. Just tap on the Buy button next to the book or periodical you want. Your NOOKcolor will ask you to confirm that you want to make the purchase. Tap *Confirm*. Your NOOKcolor downloads the book or periodical to your Daily Shelf and your library automatically.

Learn more



User guide

Please read the *User Guide* for complete information about all the features of your NOOKcolor. You'll find a copy of the *User Guide* in your library on your NOOKcolor.

Additional support

Please visit nookcolor.com/support for additional information, including:

- A PDF version of the *NOOKcolor User Guide* that you can download to your computer
- Tutorial videos
- Frequently Asked Questions

Customer support

If you have any questions, please call Customer Service, toll-free, at 1-800-THE-BOOK (843-2665), and select the option for Digital Technical Support. Outside the United States, call 1-201-438-1834.

NOOK Apps for your Mobile Device or Home Computer

To continue reading your favorite books on many of your other devices, download free NOOK software to access your NOOK library on your iPad™, iPhone®, Android™ phone, or PC. Visit: nook.com/freenookapps.

Barnes & Noble, Inc. 122 Fifth Avenue, New York, NY 10011 USA.

© 2010 Barnes & Noble, Inc. All rights reserved. NOOK, NOOKcolor, VividView, Daily Shelf, and the NOOK logos are trademarks of Barnes & Noble, Inc. or its affiliates. Patent Pending.

Screenshots and product images are simulated and for instructional purposes only.

They may differ from the actual product and are subject to change without notice.

Your use of NOOKcolor is subject to the NOOK Terms of Service located in the User Guide and here: www.nookcolor.com/legal.

Contains Reader® Mobile technology by Adobe Systems Incorporated.

All trademarks or registered trademarks that are not the property of Barnes & Noble or its affiliates are the property of their respective owners.